Easy Writer Manual

キャンバス(モニター)登録マニュアル (iOS端末)

Update : 2016.03.30



ver 1.1



www.ds-lab.co.jp





"キャンバス登録"をクリックします。

3

Easy 01 | キャンバス(モニター)登録

www.ds-lab.co.jp



		0		
iPad Ф	設定	11:22	Wi-Fi	100% 🗪
		Wi-Fi		
機内モ	-	 DSLab 		∎ ≑ (Ì)
🗢 Wi-Fi	'ew-noreg-l	FJHVGDTU8-14"のパスワードを	入力	
Blueto	c キャンセル	パスワード入力	接続	? (j)
() 2010	1577-K			≑ ()
				• ≑ (j
	l			∎ 🗢 (j)
0 819				∎ 🗢 (Ì)
○ -₩				ê ≑ (Ì)
AA 画面表	2			ê ≑ (ì
🥘 壁紙				₹ ()
💶 サウン				
🔒 <i>K</i> za	-			
パッテ				. 接続したこ
1 2	2 3 4 5	6 7	8 9	0 🗵
-	/ : ;	() ¥	& @	Join
Ø+=	undo . ,	?!	, "	Ø+=
ABC			A	ec 👘

4 "設定"ボタンをクリックします。



設定アイコンのWi-Fiリストから EasyWriterキャンバスを選択します。 例) ew-noreg-xxxxxxxxx-xx パスワードを入力して接続します。 初期パスワード:00000000 (半角数字)



www.ds-lab.co.jp

■ Easy Writer無線LANの識別名について



CODE	項目	文字	内容
1 2	製品	英字	• ew : Easy Writer
4 ~ 8	登録状態	英字	 noreg:登録前 norel:登録完了後
10 ~ 18	シリアル番号	英字・数字	 キャンバスの固有番号
20 21	バージョン	数字	 キャンバスのバージョン

Easy 01 | キャンバス(モニター)登録

www.ds-lab.co.jp













www.ds-lab.co.jp







12 "Register"ボタンをクリックします。

Easy 01 | キャンバス(モニター)登録

www.ds-lab.co.jp



新しいパスワードを設定します。 (8桁~15桁の半角英数字) 例) 12345678



5 登録が成功すると、Easy Writer キャンバスが自動的に再起動されます。